

Turbo 7 MHz for the Philips VG 8235/20 MSX-2 Computer

Original by: Bas Kornalijslijper

Translated by: Bart Hamer



Warning:


The most important part in the computer is the printed circuit board (PCB). Parts can be replaced, but not the PCB. Do not try to unsolder the parts, but cut them loose and then remove the solder pins. The use of IC sockets is recommended.

Upgrade package contents:

- Completely pre-assembled expansion board
- 40-pin IC socket
- Switch with led
- Resistor array (2K2)
- Insulating material (shrink tubing)
- Thin wire



The Philips VG 8235 MSX-2 computer.

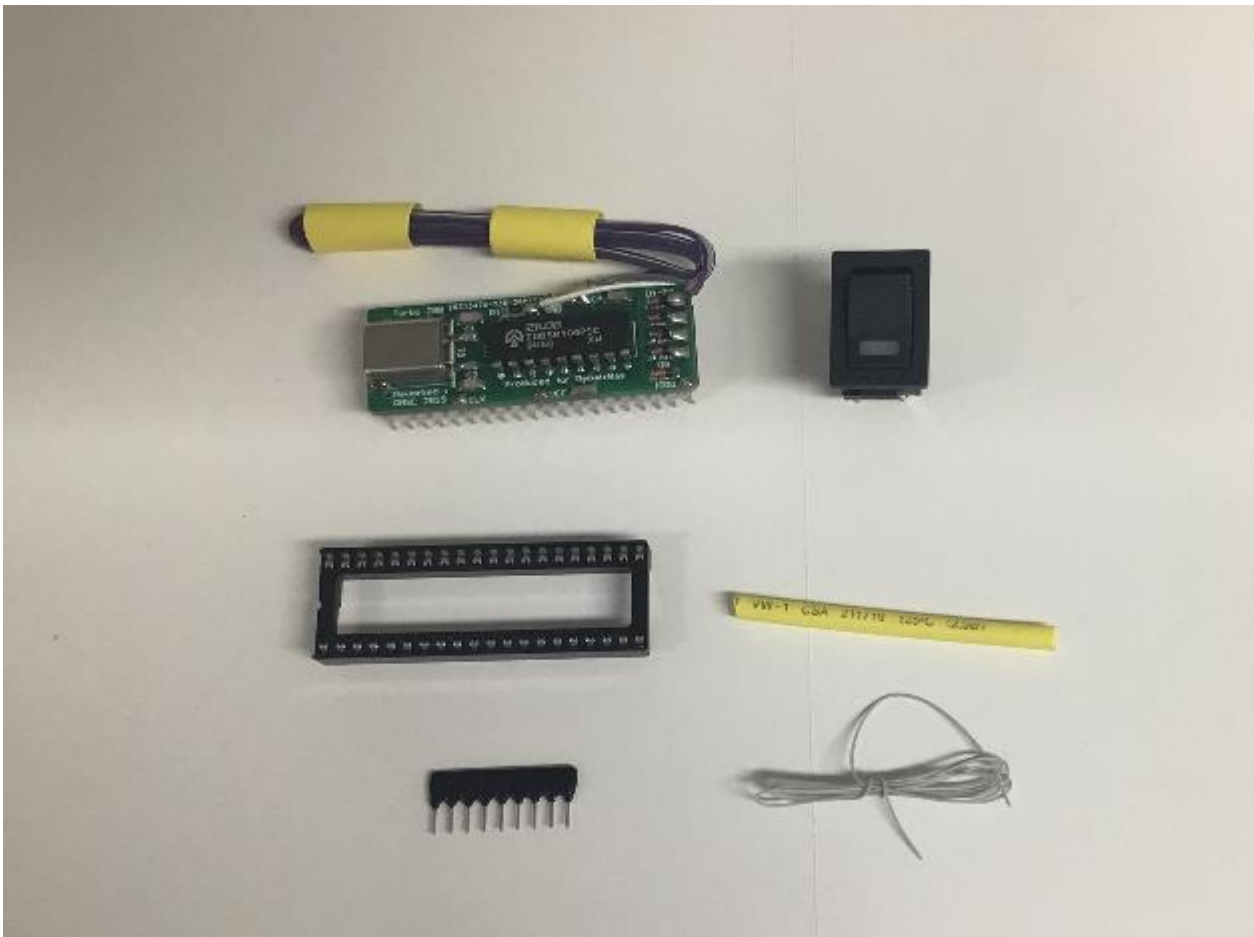

The contents of the upgrade package.

Installation:

- Remove the cover with keyboard (5 screws and various cables).
- Remove any earth cables present.
- Remove the video PCB (2 screws and 1 cable).
- Remove the disk drive (2 screws and 2 cables).
- Remove the motherboard (5 screws and 2 cables).
- Remove the U1 (Z80).
- Remove R57 (47 Ω).
- Remove R82 (47 Ω).
- Make a connection between R57 (text side C44) and R82 (text side R82).
- Place a 40-pin IC socket in the empty place of U1 (Z80).
- Place the Turbo 7 MHz expansion board in the IC socket.
- Make a connection between TP10 and one of the free diodes on the Turbo 7 MHz expansion board.
- Mount the switch with LED in the top cover or another place of your choice.
- The red or white wire is the positive side of the LED.
- The brown or black wire is the negative side of the LED.
- The orange/yellow or gray/purple wire pair is for the switch.
- Insulate the solders with a piece of shrink tubing.
- The resistor array (2K2) is not used.

Testing the Turbo 7 MHz:

The operation of the Turbo 7 MHz can be tested with the following BASIC test program:

```
10 FOR I=1 TO 100  
20 FOR J=1 TO 100: PRINT J;: NEXT J: NEXT I
```